

Drive Chain Adjustment

Drive Chain

The drive chain will stretch with use and will require periodic adjustments. To check the chain tension, remove the chain guard and measure the slack. The amount of slack in the chain should not exceed 10-20mm or $\frac{1}{4}$ " - $\frac{1}{2}$ ".

Inspect the drive and axle sprockets for worn, damaged or broken teeth. Replace as needed. Inspect the chain links for damaged, worn or loose rivets. Repair or replace as needed.

Chain Slack Adjustment

Loosen the axle position lock bolts slightly and turn the chain adjuster nut to take up the excess slack in the chain. Once the chain has been adjusted to the proper tension retighten the axle position locking bolt.

The chain should be kept well lubricated to prevent excess wear and premature failure. We recommend that you lubricate the chain every 15 hours of operation, or more frequently if needed, with a high quality chain lubricant.

