

WP-0021  
11/03/2006

# Beamer starting procedure



1st step insert the ignition key, hold in the LH brake handle. This brake must be applied or the starter motor will not turn. Turn the ignition key to the right to the on position, then move the choke lever to the LH position to open the choke as shown in picture. Push the starter button and hold for 5-10 seconds **DO NOT GIVE THE BIKE ANY THROTTLE, THIS WILL FLOOD THE BIKE OR FOUL THE SPARK PLUG.**



Do not hold the starter button for more than 10 seconds. If the bike does not start, after 3 or 4 times. Turn the ignition key off then back on and repeat step 1. Once the bike is started let idle for 1 minute or longer it should idle a little high. Once the idle starts to decrease slowly move the choke lever to the RH side to fully close the choke. Do not leave the choke on while running the unit, this will cause the bike to run poorly, cut off, or not restart.



Once the bike is warm when restarting the use of the choke is not necessary, or only half choke will get the bike started. Eton does offer an electric or (automatic choke) cylinder for all the beamer and atv models.

