

Checking and Changing Engine Oil Sport 50 Scooter

Checking the engine oil level:

1. Place the unit on a level plane.
2. Check the oil level with the oil level gauge. Do not screw it in when making this check.



Add the recommended oil up to the upper level if the oil level is below or near lower level line on the gauge.

Draining the oil:

Remove the oil filter cap and the oil drain bolt.
NOTE: Drain the oil while the engine is warm to ensure complete draining.

Remove the oil filter cap, spring and oil filter screen. Check the O-ring for damage or fatigue. Install a new oil filter screen and spring. Then, install the cap.

Install the oil drain bolt with sealing washer.

TORQUE: 12-19 N-m (9.0~14 lbf-ft)

Fill the crankcase with recommended oil. SAE 10W-30 motor oil

ENGINE OIL CAPACITY: 0.8 liter at draining.

- Install the oil filter cap.
- Install the oil level gauge.
- Start the engine and let it idle for 2 to 3 minutes. Stop the engine and check that the oil level is at the upper line on the gauge. Make sure there are no oil leaks.

