

Changing Transmission Oil on all Sport 150 Scooter's

Changing Transmission Oil

1. Place an oil catch pan under the unit directly below the transmission box.
2. Remove the transmission box drain plug located on the bottom of the transmission box on the (LH) side of the engine.
3. Remove the transmission box fill hole plug located on top of the transmission box on the (LH) hand side of the engine
4. Warm the engine up and allow the oil to drain completely (15-30 min).
5. Reinstall the drain plug and tighten. Torque to 7-10lbf-ft
6. Fill the transmission box with of SAE 80-140 gear oil (100cc / 3.4oz)
7. Reinstall the fill hole plug. Torque to 2-3lbf-ft.
8. Dispose of used oil at a proper recycling station as required by law.

