



ETON America, LLC



Service Bulletin

Bulletin No: 0007
Date: 08/22/2000

Beamer Brake Lights Stay on

BEAMER

Units Affected :

Beamer Scooters

Reason for bulletin:

Brake lights stay on after brake released.

Cause:

Light on will also draw on battery.

Repair:

Lube rear brake cam-it will bind in housing and cause brake lights to stay on. Verify Repair: Retest brake lights for proper operation.

REAR BRAKE CAM LUBE


Step 1 : Remove rear wheel.

Step 2 : Remove rear brake shoes.

Step 3 : Remove rear brake cam arm and cable.

Step 4 : Remove rear brake cam and lube shaft and lube shaft housing.

Note: see illustrations below.

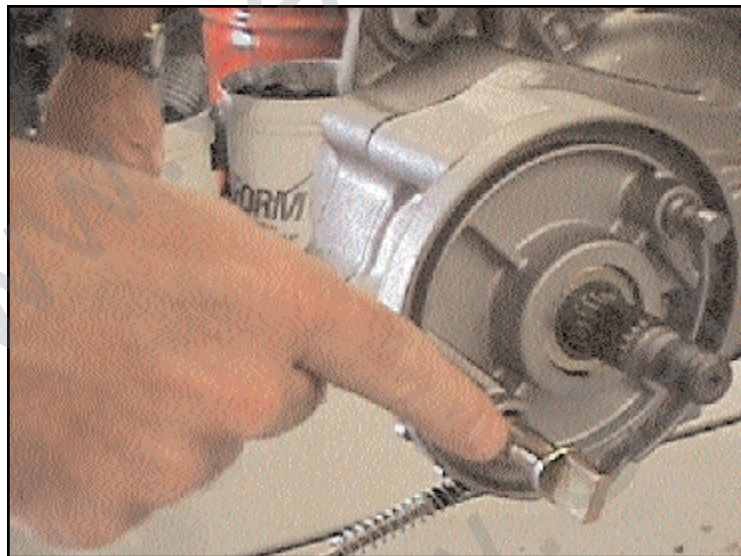

Flat Rate Code: 007

Flat Rate: 0.4 Hours