



ETON America, LLC




Service Bulletin

Bulletin No: 0033
Date: 04/01/2004

Oil Pump Flow Adjustment all Oil Injected two cycle Engines

To adjust the oil pump flow on a two cycle oil injected engine you must adjust the oil pump cable length. . The Oil pump cable is located on the right hand side of the engine just above the (RH) A-arm

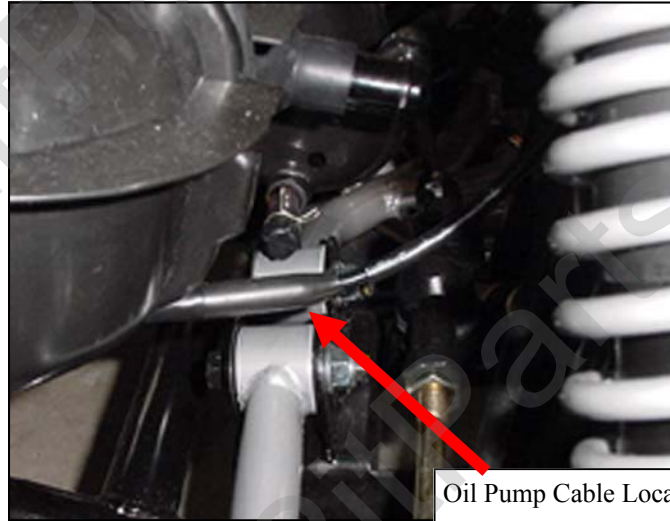

Oil Pump Cable Location

To reduce the oil flow you must lengthen the cable by loosening the lock nut and turning the adjusting nut counter clockwise then retighten the locking nut. To increase the oil flow you would shorten the cable by turning the adjusting nut clockwise.

