

**WP-0013**  
**10/13/2005**

# Change Transmission Gear Oil (2006 Models - RX4-70M, 70, 90R)

Gear oil needs to be changed every year.





1. Place an oil catch pan under the unit directly below the transmission box.
2. Remove the transmission box drain plug located on the bottom of the transmission box on the underside of the unit.
3. Remove the transmission box fill hole plug located on top of the transmission box near the oil tank bracket on the left hand side of the unit.
4. Allow the oil to drain completely (15-30 min).
5. Reinstall the drain plug and tighten. Torque to 7-10lbf-ft
6. Fill the transmission box with of SAE 80-90 gear oil

70cc Engine = 100cc / 3.4oz

90cc Engine with Reverse = 300cc / 10.2oz

7. Reinstall the fill hole plug finger tight (90R only) or torque the fill bolt 7-10lbf-ft (70 and 70M only).
8. Dispose of used oil at a proper recycling station as required by law.

## Transmission Oil Drain & Fill

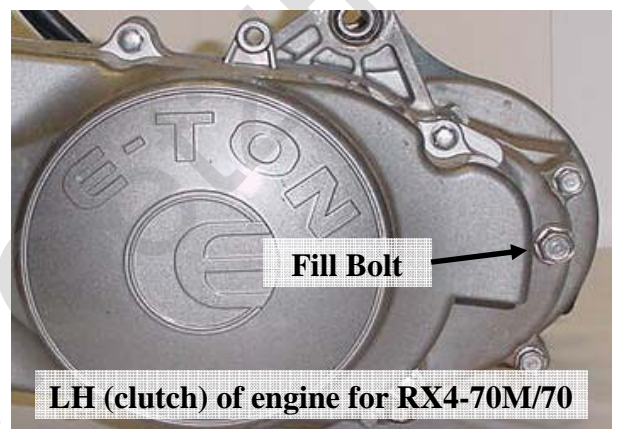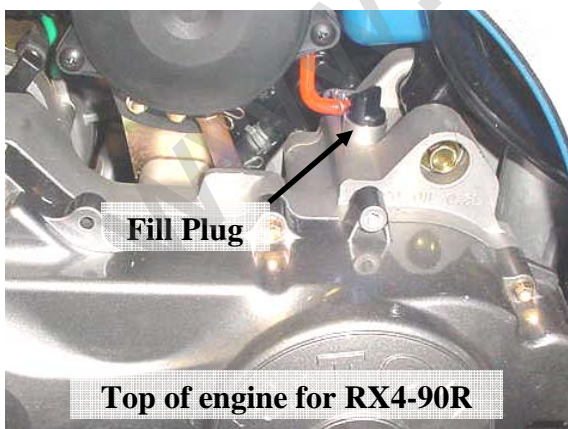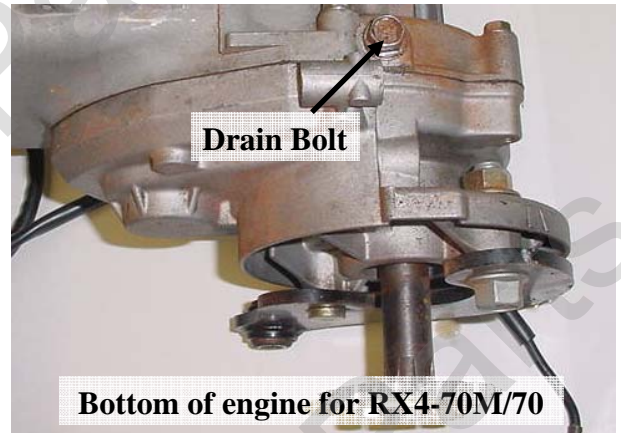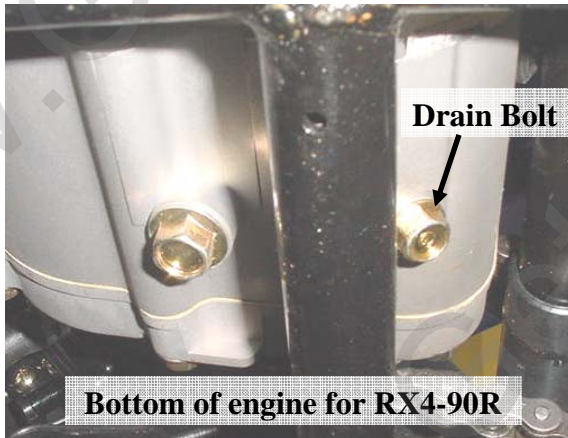

**ETON America, LLC**  
7092 Howard Street  
Unit - F  
Spartanburg, SC 29303

