

WP-0018
10/01/2003

Beamer Scooter Battery Service


The unit's battery is located under the floor board mat and supplies electrical power to the unit. The battery is a 12 volt gel acid type that contains no liquid electrolyte. The battery should be removed from the vehicle when stored for extended periods and charged before being replaced in the unit. Use a trickle charger set at 12 volts to recharge the battery to full charge before replacing it in the unit.

When reinstalling the battery, be sure to connect the red cable to the positive (+) terminal and the black cable to the negative (-) terminal.

The battery should be replaced every three years or when it no longer holds a charge.

Do not expose the battery, for extended periods of time, to freezing temperatures. If the battery has been frozen it will need to be replaced. There is an inline fuse on the positive lead of the battery to protect the wiring system from over loads. If your starter motor will not turn over and the battery is fully charged, check the inline fuse on the unit.

Replace the fuse with a 7A fuse.

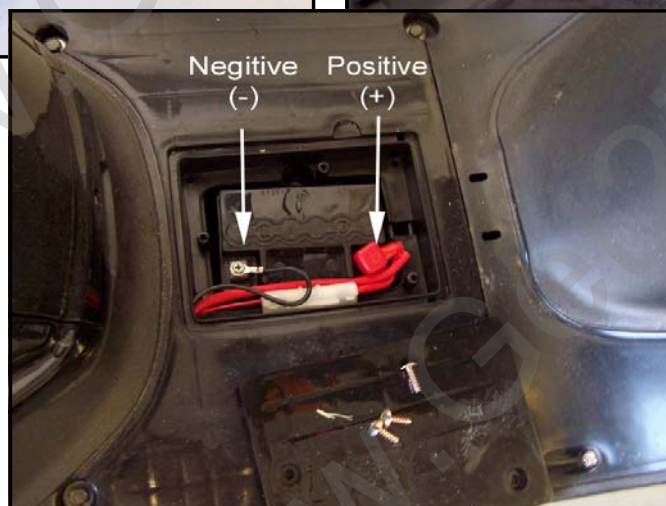

ETON America, LLC
7092 Howard Street
Unit - F
Spartanburg, SC 29303

