




**13.6 Engine Will Not Start
(Start motor turns)**

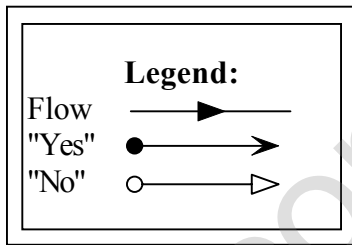


Engine Does Not Start

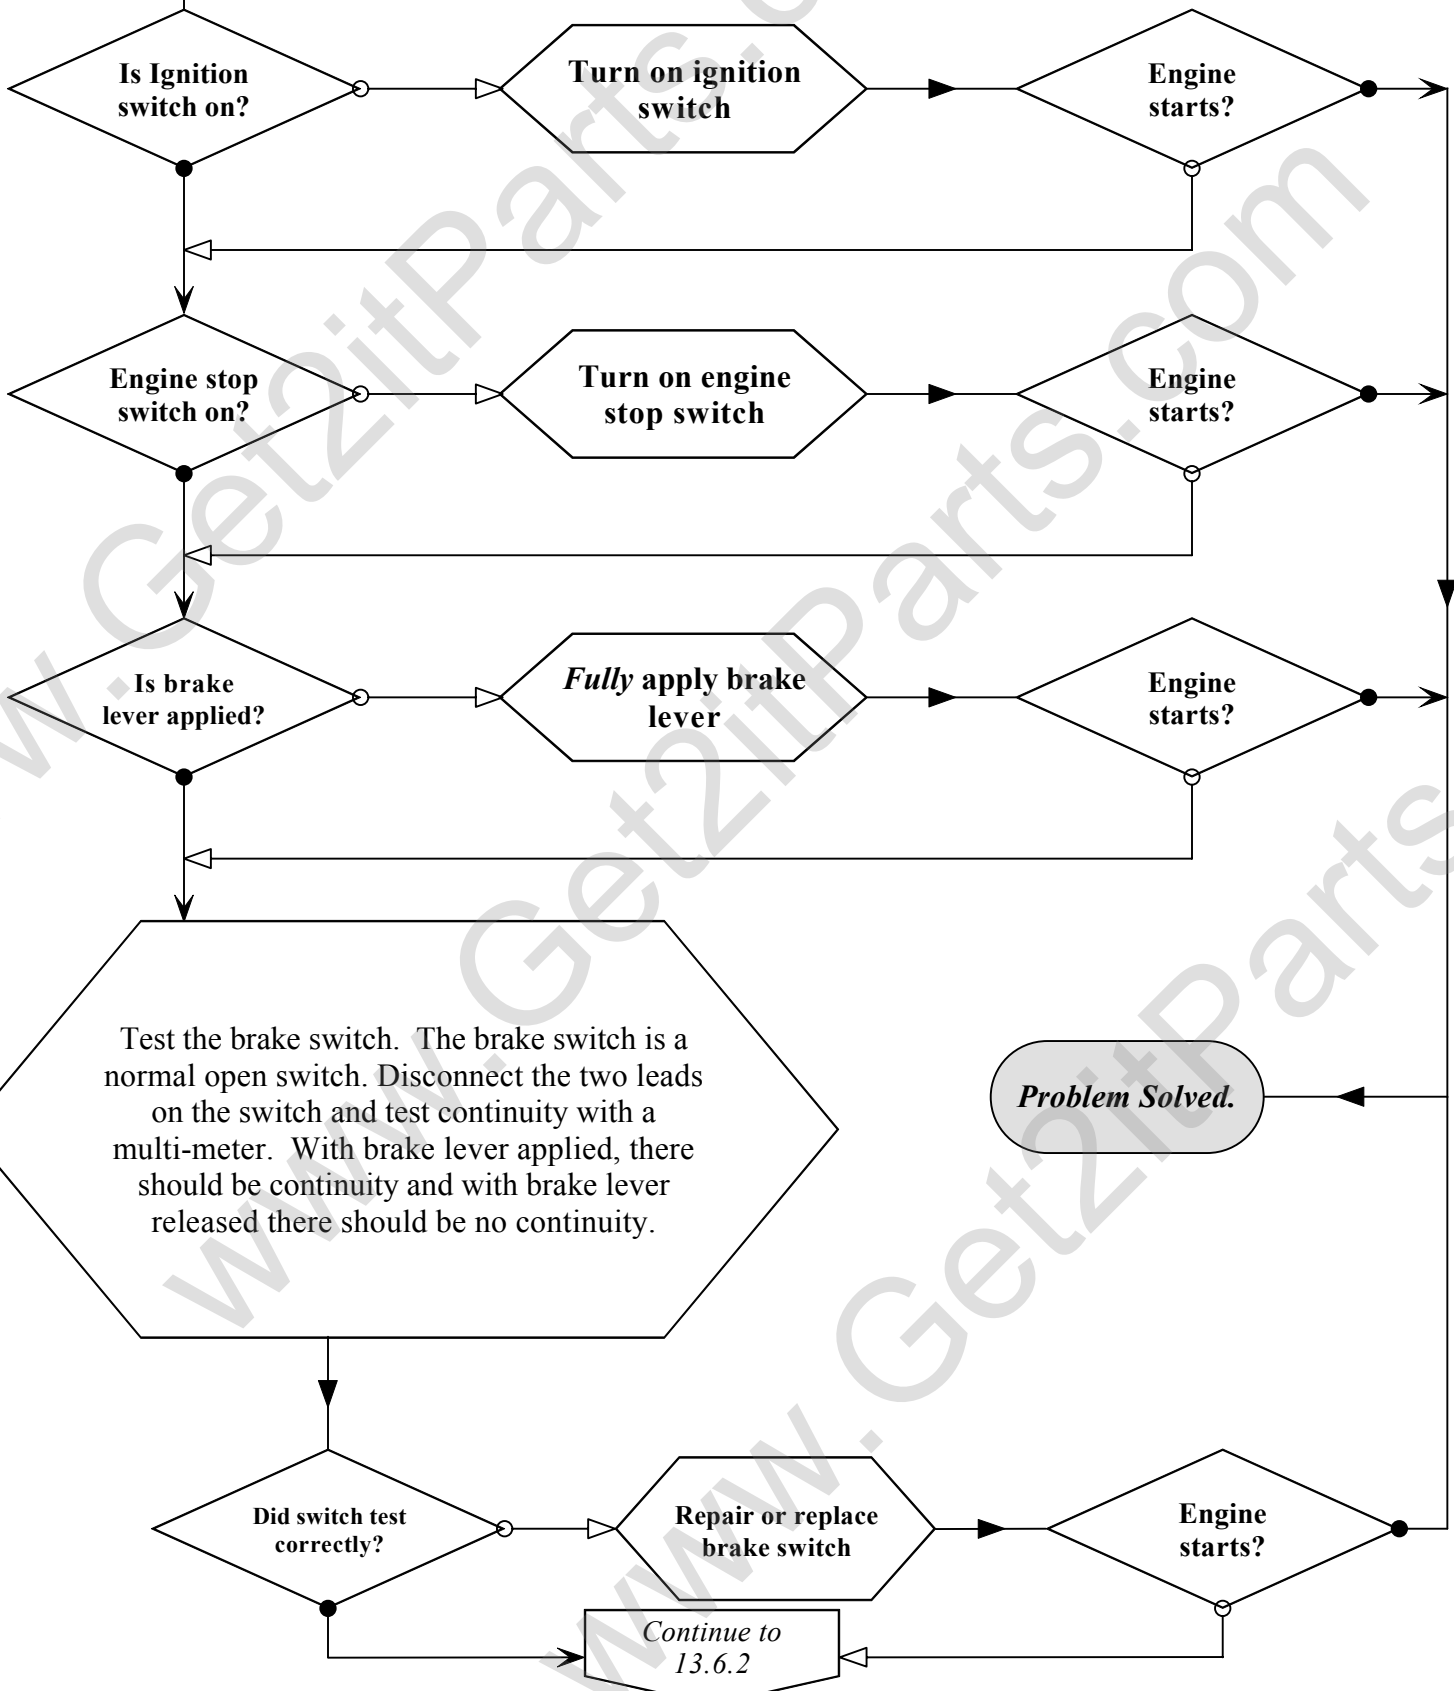


13.6.2 Engine Will Not Start, continued

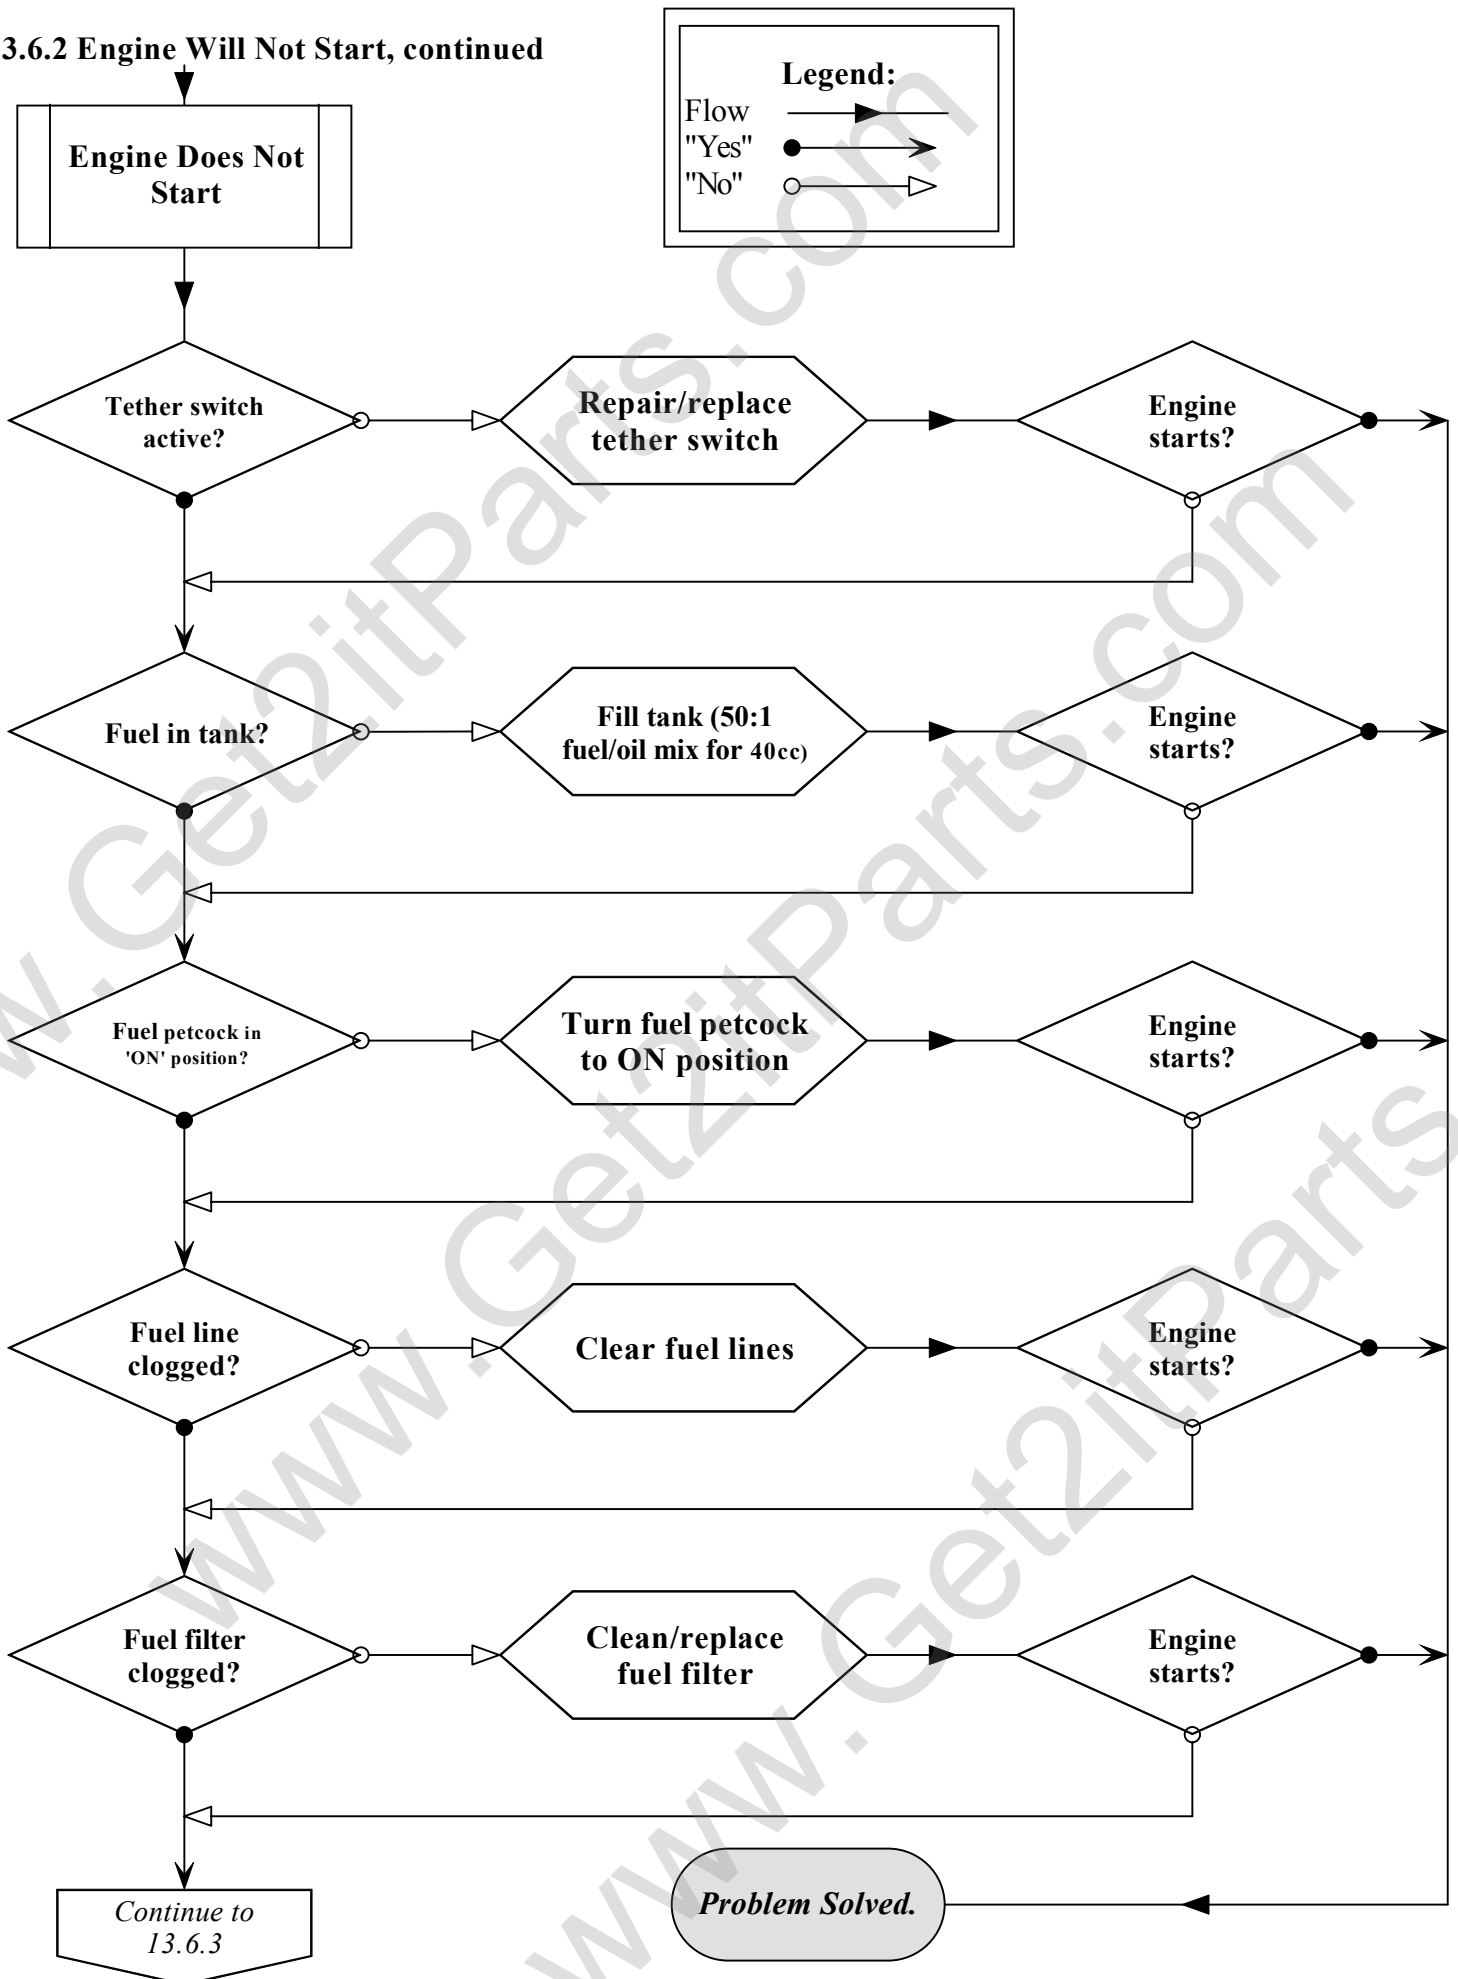


13.6.3 Engine Will Not Start, continued

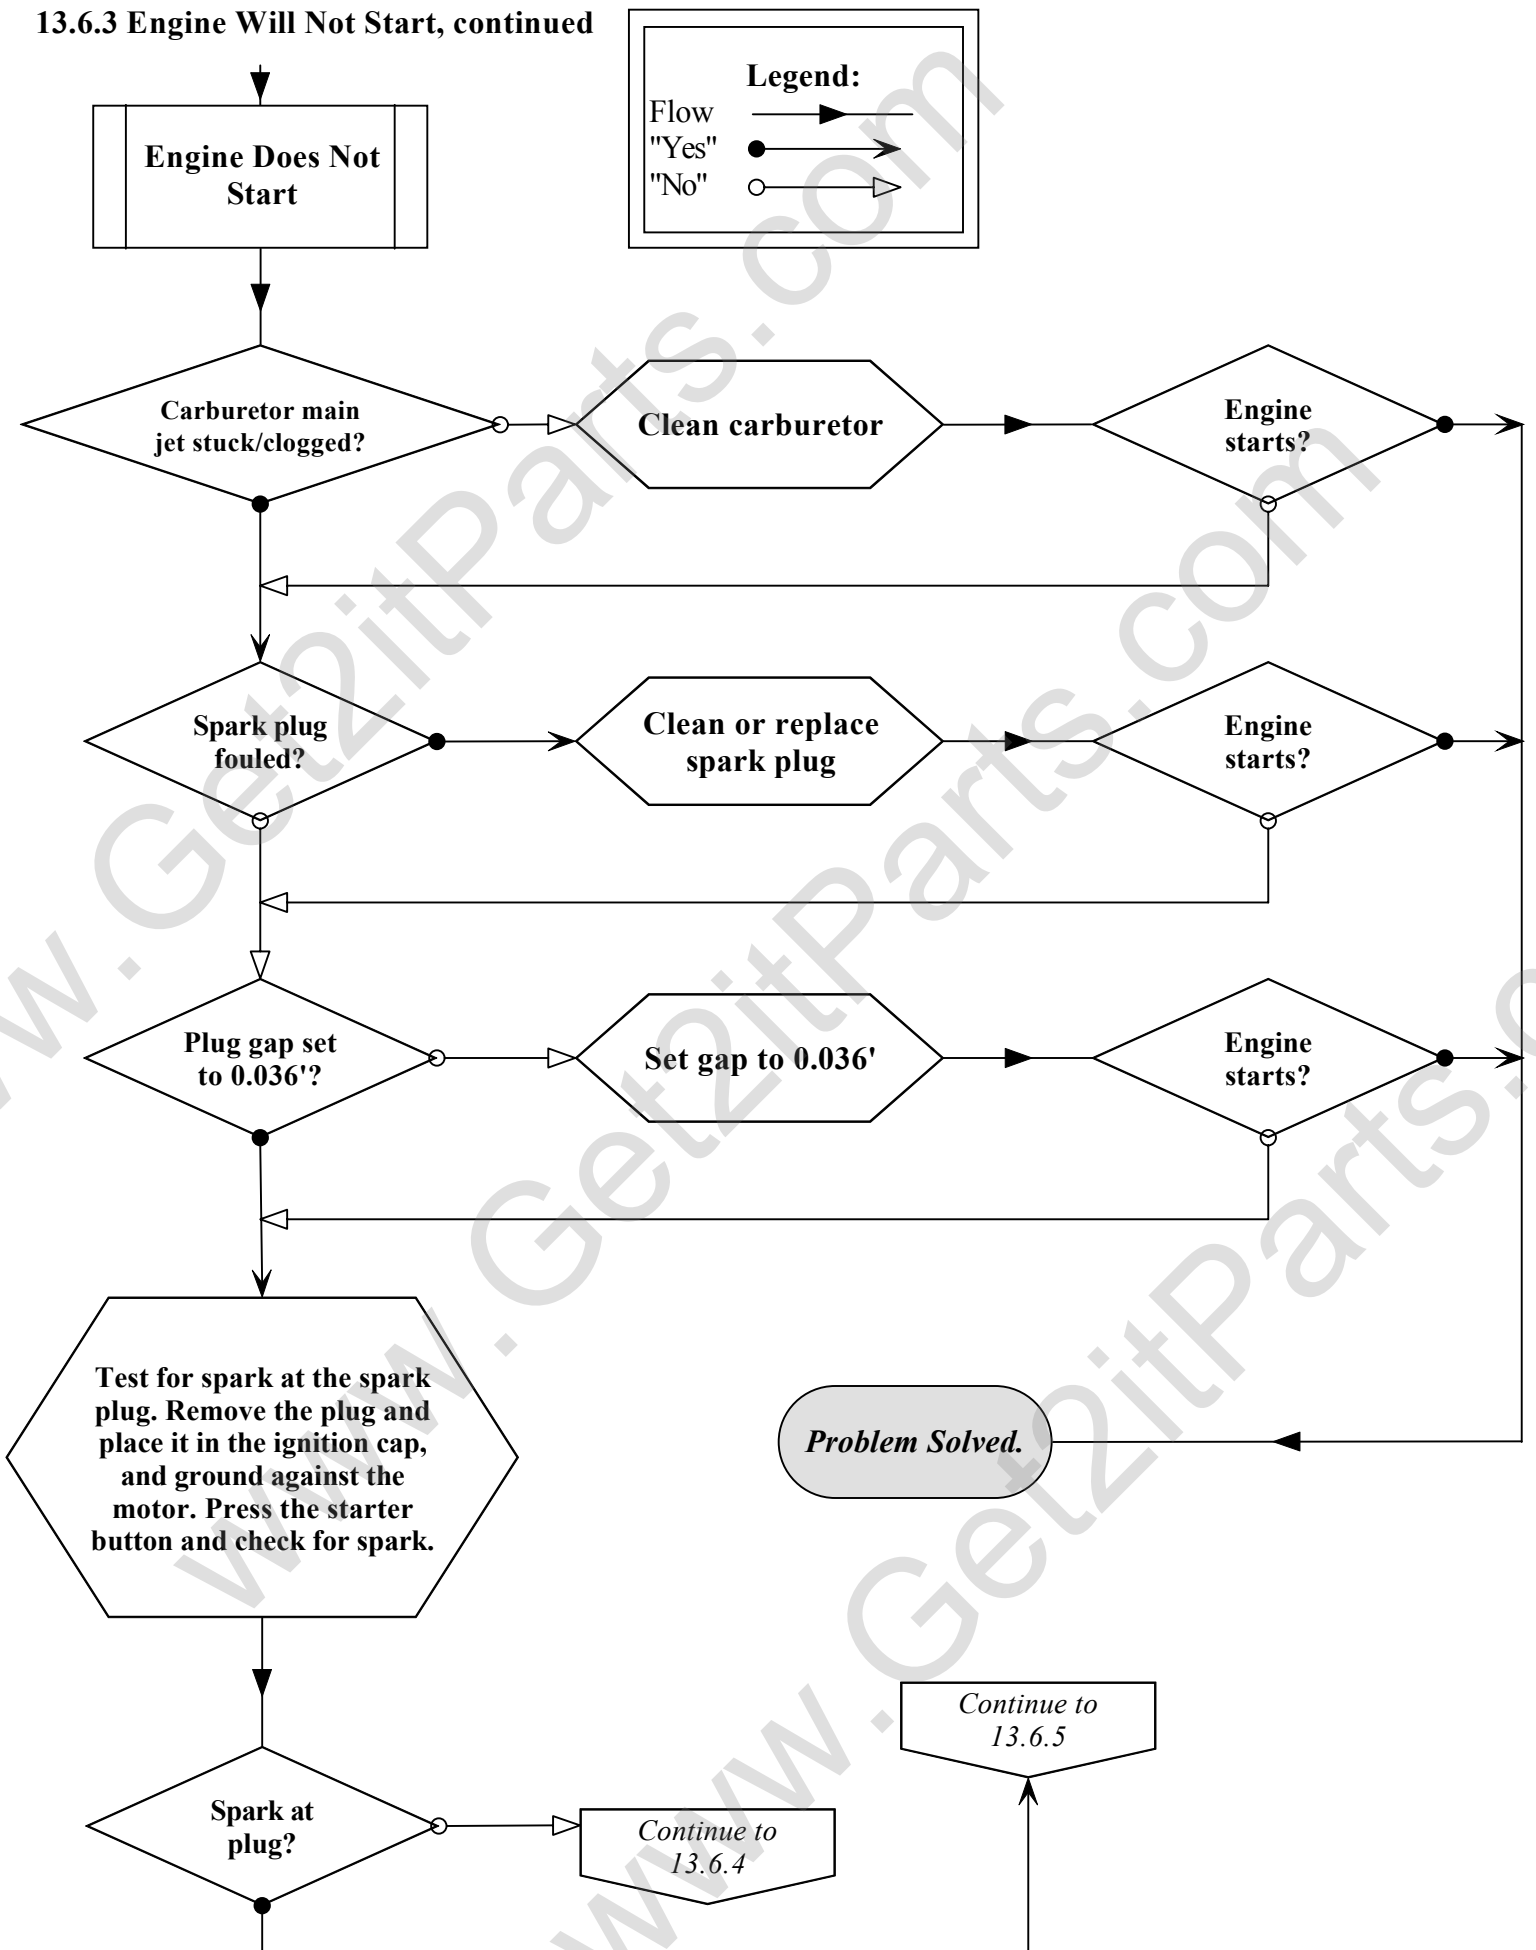

13.6.4 Engine Will Not Start, continued

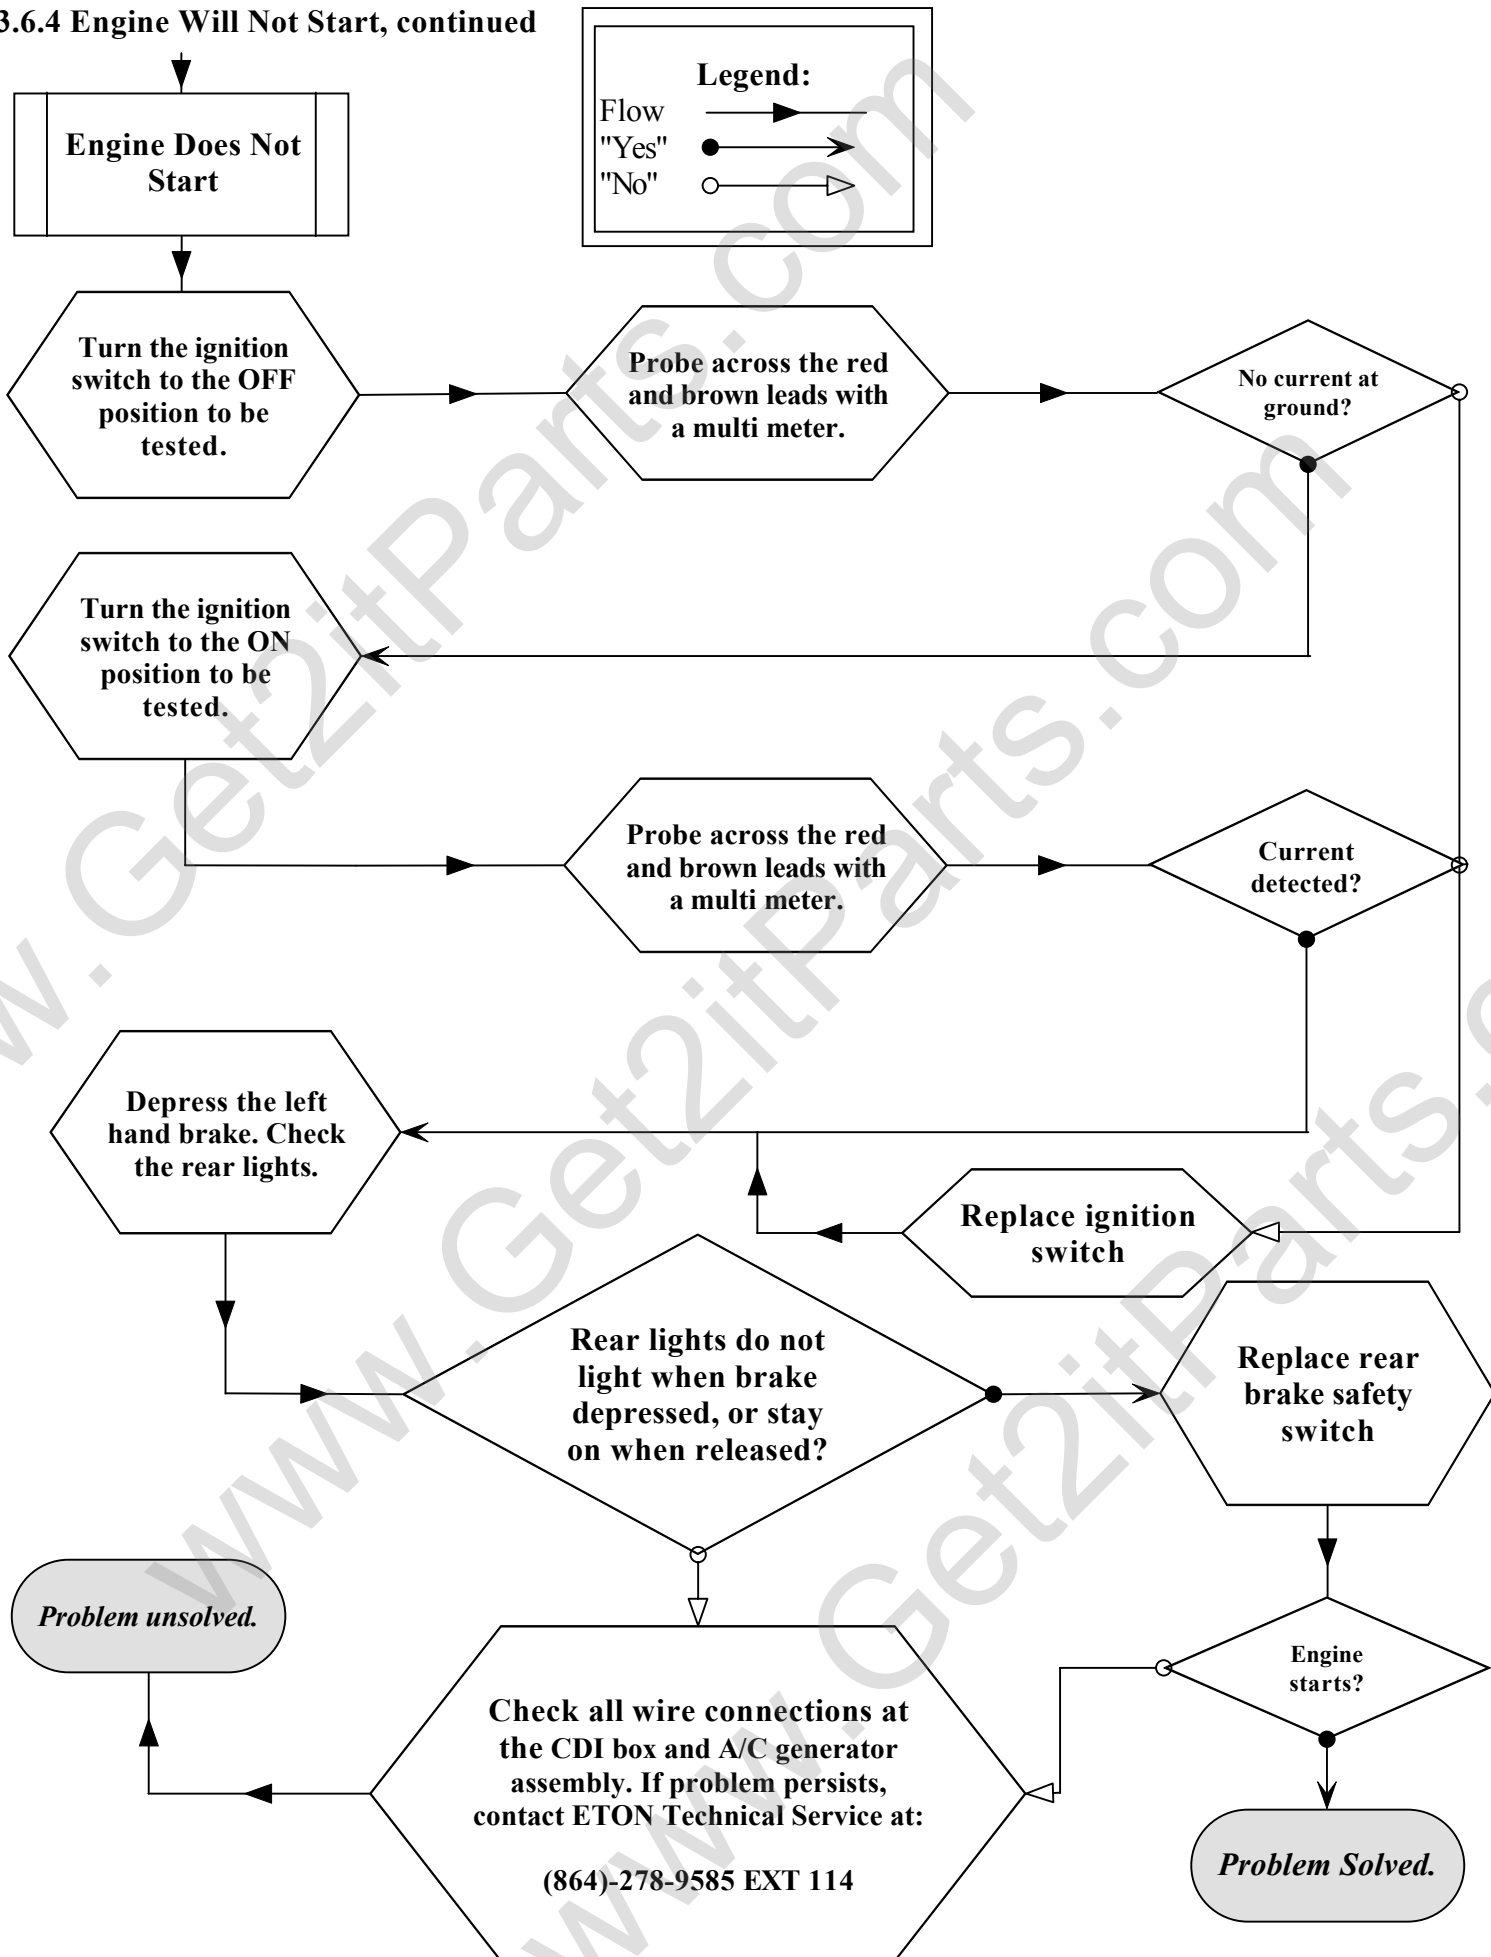

13.6.5 Engine Will Not Start, continued

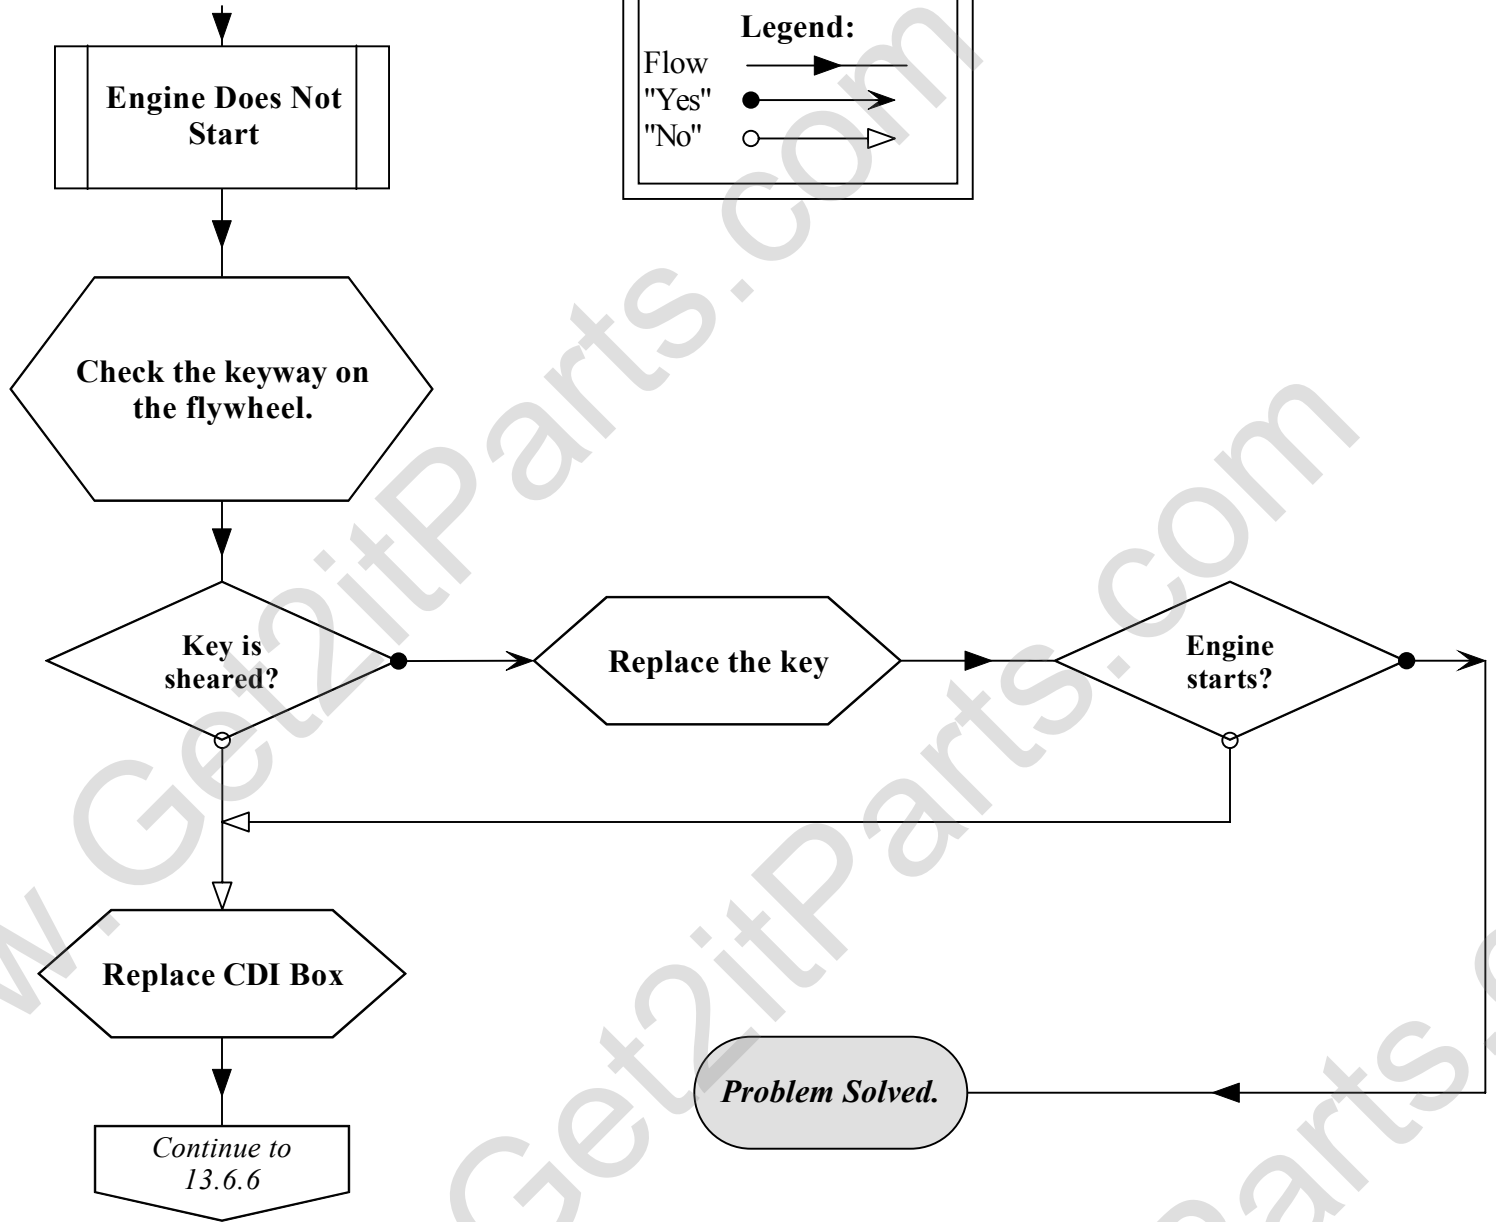

13.6.6 Engine Will Not Start, continued

